

cry baby
I CANTRELL®

EXTERNAL CONTROLS



1 FINE TUNE knob adjusts tone of toe-down rocker position

BASIC OPERATION

POWER

The Jerry Cantrell Cry Baby® Wah is powered by one 9-volt battery (accessed via underside of pedal), the Dunlop ECB003 9-volt adapter, or an MXR® Brick™ Series power supply.

DIRECTIONS

1. Run a cable from your guitar to the Jerry Cantrell Cry Baby Wah's INSTRUMENT jack, and run another cable from the Jerry Cantrell Cry Baby Wah's AMPLIFIER jack to your amplifier.
2. Push the toe of the pedal down until you feel a "click" to turn the pedal on/off.
3. Rotate the FINE TUNE knob clockwise for a brighter toe-down response or counterclockwise for a darker toe-down response.
4. Rock your foot back and forth on the pedal to hear the vocal, expressive tones that the Cry Baby Wah is famous for.

SPECIFICATIONS

IMPEDANCE

Input Impedance	1M Ω
Output Impedance	10K Ω

FILTER CENTER FREQUENCY

Heel Down	320 Hz ~ 390 Hz
Toe Down Fine Tune Max	1700 Hz to 2070 Hz
Toe Down Fine Tune Min	1050 kHz to 1270 Hz

MAXIMUM LEVEL

Input	-11.5 dBV
Output	+6 dBV

MAXIMUM GAIN AT CENTER FREQUENCY

Heel Down	+18 dBV
Toe Down	+20 dBV

NOISE FLOOR*

Heel Down	>97 dB
Toe Down	>89 dB

Bypass	Hardwire
Current Draw	1 mA
Power Supply	DC 9 volts

* VREF=1VRMS, A-weighted