
External Controls



- 1 LEVEL knob sets overall volume of effect
- 2 OCTAVE switch toggles octave-up fuzz on/off (indicated by red LED)
- 3 FUZZ knob sets intensity of fuzz effect
- 4 FOOTSWITCH toggles effect on/bypass (white LED indicates on)

Basic Operation

Power

Authentic Hendrix™ '69 Psych Series Octavio® Fuzz is powered by the Dunlop ECB003 9-volt adapter or the DC Brick™, Iso-Brick™, and Mini Iso-Brick™ power supplies. This pedal cannot be powered by a battery.

Directions

- 1 Run a cable from your guitar to JHW2's INPUT jack and another cable from JHW2's OUTPUT jack to your amplifier.
- 2 Start with VOLUME and FUZZ controls at 12 o'clock.
- 3 Turn effect on by depressing the footswitch.
- 4 Rotate LEVEL knob clockwise to increase overall volume or counterclockwise to decrease it.
- 5 Rotate FUZZ knob clockwise to increase the amount of fuzz or counterclockwise to decrease it.
- 6 By default, the octave-up fuzz effect is disabled. To engage it, push the OCTAVE switch to its IN position.

Specifications

OCTAVE OFF

Input Impedance	10 k Ω
Output Impedance	
Max Volume	400 k Ω
Mid Volume	50 k Ω
Max Output	-3 dBV
Max Gain	43 dBV
Bypass	True Hardwire

OCTAVE ON

Input Impedance	10 k Ω
Output Impedance	
Max Volume	20 k Ω
Mid Volume	30 k Ω
Max Output	-2 dBV
Max Gain	31 dBV
Bypass	True Hardwire

POWER REQUIREMENTS

Current Draw	5 mA
Power Requirements	9 volts DC

**Drive stage adjusted maximum CW*

***With all controls at mid position*