



**AUTHENTIC  
HENDRIX™  
'69 PSYCH  
SERIES  
UNI-VIBE®  
CHORUS/  
VIBRATO**



---

# External Controls



- 1 SPEED knob controls sweep rate of effect
- 2 LEVEL knob controls overall volume of effect
- 3 VIBE switch toggles between chorus mode and vibrato mode
- 4 DEPTH knob controls overall intensity of effect
- 5 FOOTSWITCH toggles effect on/bypass (white LED indicates on)

---

# Basic Operation

---

## Power

The Authentic Hendrix™ '69 Psych Series Uni-Vibe® Chorus/Vibrato is powered by the Dunlop ECB003 9-volt adapter or the DC Brick™, Iso-Brick™, and Mini Iso-Brick™ power supplies. This pedal cannot be powered by a battery.

---

## Directions

- 1 Run a cable from your guitar to the JHW3's INPUT jack and run another cable from the JHW3's OUTPUT jack to your amplifier.
- 2 Start with SPEED, LEVEL, and DEPTH controls at 12 o'clock.
- 3 Turn the effect on by depressing the footswitch.
- 4 Rotate SPEED knob clockwise to increase sweep rate of effect or counterclockwise to decrease it.
- 5 Rotate LEVEL knob clockwise to increase overall volume or counterclockwise to decrease it.
- 6 Rotate the DEPTH knob clockwise to increase intensity of effect or counterclockwise to decrease it.
- 7 By default, this pedal is set to chorus mode. Push VIBE switch to engage vibrato mode.

---

# Specifications

## VIBE OFF

Input Impedance	600 k $\Omega$
<b>Output Impedance</b>	
Full Volume	29 k $\Omega$
Half Volume	33 k $\Omega$
Max Input	0 dBV
Max Output	8 dBV
Noise Floor*	-97 dBV
Speed Control	0.5 Hz to 10.5 Hz
Bypass	True Hardwire

## VIBE ON

Input Impedance	730 k $\Omega$
<b>Output Impedance</b>	
Full Volume	180 k $\Omega$
Half Volume	33 k $\Omega$
Max Input	0 dBV
Max Output	27 dBV
Noise Floor*	-97 dBV
Speed Control	0.5 Hz to 10.5 Hz
Bypass	True Hardwire

## POWER REQUIREMENTS

Current Draw	5 mA
Power Requirements	9 volts DC