

LIVE TO PLAY LIVE®





# **M107** PHASE 100

#### DESCRIPTION

- Big brother of the Phase 90 with a broader range of sounds
- Four-position rotary switch selects four preset waveforms
- Spacey, psychedelic ambience for guitar solos or chords

## **POWER**

The MXR Phase 100 is powered by one 9-volt battery (remove bottom plate to install), a 9-volt AC adapter such as the Dunlop ECB003/ECB003E, or a DC Brick™ power supply.

### **CONTROLS**

- 1 INTENSITY knob selects one of four preset phase waveforms
- 2 SPEED knob controls speed of phase effect
- FOOTSWITCH toggles effect on/bypass (red LED indicates on)



#### **DIRECTIONS**

- Run a cable from your guitar to the Phase 100's INPUT jack and run another cable from the Phase 100's OUTPUT jack to your amplifier.
- Start with all controls at 12 o'clock.
- Turn the effect on by depressing the footswitch.
- Rotate the SPEED knob clockwise for a faster phase effect or counterclockwise for a slower phase effect.
- Use the INTENSITY knob to select your desired waveform.

# SAMPLE SETTINGS

SLOW AND DEEP	SPINNING SPEAKER	MEDIUM SUBTLE
INTENSITY SPEED  WHAT  W	INTENSITY SPEED  W	INTENSITY SPEED  SPEED  SPEED  WW

#### **SPECIFICATIONS**

Input Impedance	500 kΩ
Output Impedance	3 kΩ
Maximum Intput Level	l +5 dB
Maximum Output Leve	el +8 dB
Noise Floor*	95 dBV
Phase Shift Range	180 Degrees
Bypass	Hardwire
Current Draw	6 mA
Power Supply	9 volts DC

<sup>\*</sup>A-weighted



DUNLOP MANUFACTURING, INC. P.O. BOX 846 BENICIA, CA 94510 U.S.A. TEL: 1-707-745-2722 FAX: 1-707-745-2658