





BASIC OPERATION

POWER

The Mick Ronson Cry Baby® Wah is powered by one 9-volt battery (accessed via underside of pedal), the Dunlop ECB003 9-volt adapter, or an MXR® Brick™ Series power supply.

OPERATION

1. Run a cable from your guitar to the Mick Ronson Cry Baby Wah's INSTRUMENT jack and run another cable from the Mick Ronson Cry Baby Wah's AMPLIFIER jack to your amplifier.
2. Turn on the amplifier and begin playing.
3. To turn the pedal on/off, push the toe of the pedal down until you feel a "click".
4. By rocking your foot back and forth on the pedal, you can change the effect that the Cry Baby Wah has on the tone of your instrument instantaneously.

SPECIFICATIONS

Input Impedance	78 k Ω
Output Impedance	16 k Ω
Wah Center Frequency	500 Hz to 2.25 kHz
Bypass	Hardwire
Current Draw	750 μ A
Power Supply	9 Volts DC